



**TEMPERATURE SENSOR SF.7**

**A5045011**

**OUTSIDE TEMP. SENSOR FOR FCRA/FCRC SM.7P**

**A5045007**

 
**Contents**

Type Indication_____	1
Example_____	1
SF.7 Room sensor_____	2
Connection_____	2
SM.7P Outside temperature sensor_____	2
Connection_____	2




**Type Indication**

**SM7/..../....**

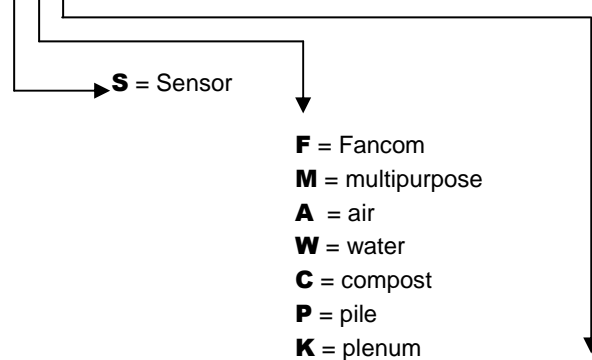

**7** = FC-series, FSU-series,  
700-series F2000-series

**SM7/..../....**

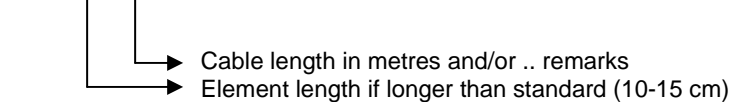

**Example**

SP.7/1/.+bulb = pile sensor for FC series, FSU series , 700 and F2000 series, length 100 cm with connection bulb

SC.7/0.65/30 = compost sensor for FC series, FSU series , 700 and F2000 series , length 65 cm with 30m cable attached

SA.7/./30 = air sensor standard element (10-15 cm) for FC series, FSU series , 700 and F2000 series with 30m cable attached

SK.7/0,35 = plenum sensor for FC series, FSU series , 700 and F2000 series , length 0,35m without cable

SA.7/30/punt = air sensor standard element, pointed (for wet bulb measurement RH) for FC series, FSU series , 700 and F2000 series with 30m cable

S.7 = S7 sensor element

**Technical specifications**

Temperature range sensor type S.7	-50°C till +110 °C
accuracy (-25°C till +100 °C)	<0,2°C
accuracy (-25°C till +100 °C)	<0,5 °C



**SF.7 Room sensor**

Used with FC series, FSU series , 700 and F2000 series



 
**Connection**

2 wire connection; not polarity dependent



**SM.7P Outside temperature sensor**

Spray proof connection box; used for FCRA and FCRC

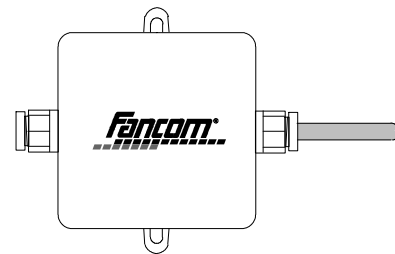

**Connection**

3 wire connection; polarity dependent

